



THROTTLE POSITION SENSOR CW/CCW WIRING DIAGRAM

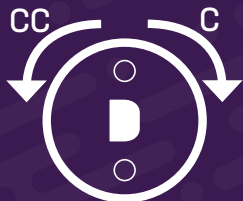


*Looking at the end of the
throttle shaft.*

CW OR CCW
Non Contact Sensor.

CW 0.5 – 4.5V

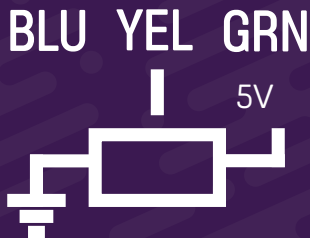

CCW 0.5 – 4.5V

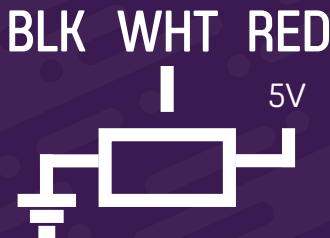

linkecu.com

