


External E-Throttle Wiring Instructions

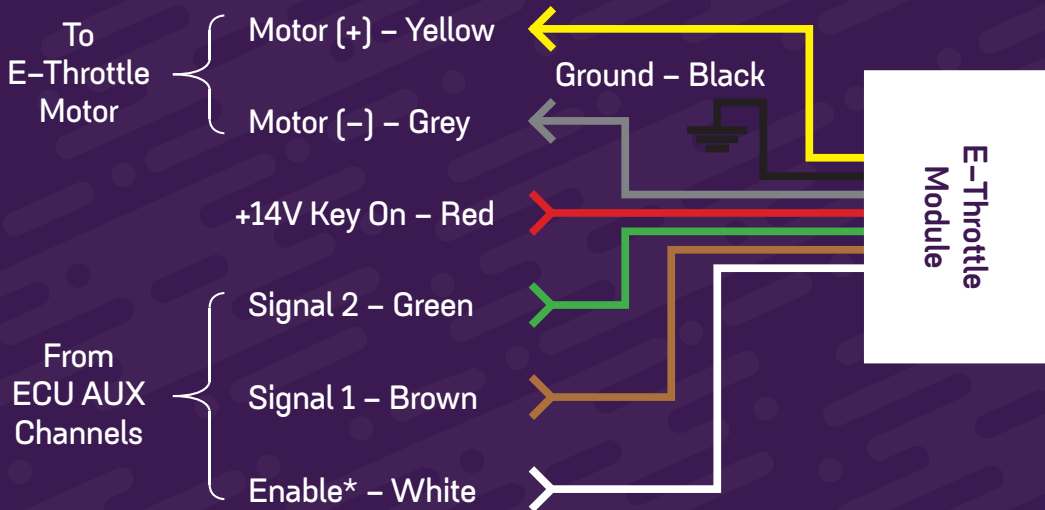

Notes:

- Enable pin must be driven LOW to enable the device.
- Motor (+) should be wired to the motor terminal that causes the throttle body to open when +12V is applied. (Ground the other terminal to test).

Specifications:

- Operating Voltage Range: 6–23V.
- Maximum Input Voltage: 37V.
- Maximum Continuous Current Draw: 6A.
- Operating Temp: 85 Deg C (MAX).